


Cygnus 3 piece deck mounted basin mixer

| ILLUSTRATION | FEATURES AND BENEFITS: |
|---|--|
|  | Complete your bathroom with the elegantly rounded lines of Cygnus bath and shower accessories. All of these fittings are made of solid brass with a chrome finish. |
| AVAILABILITY/ PRODUCT CODES: | |
| cygt420cp 3 piece deck mounted basin mixer | |
| COMPATIBILITY: | |
| Working pressure 0.5 bar, tested to 10 bar | |
| CARE AND MAINTENANCE INSTRUCTIONS: | |
| Clean regularly, wipe with a clean damp cloth, followed by a clean dry cloth. Abrasive or cream cleaners should NOT be used. For marks which are difficult to remove in this way, use sparingly and infrequently a 'multi use metal polish' recommended for the finish of your product. | |

C.P. Hart cannot guarantee the accuracy of this information.

Dimensions are nominal – for guidance only and are not to be used for pre-installation.

For further information call Central Sales on 0845 600 1950

For projects & developments call the Contracts Team on 0845 600 1980


www.cphartboutique.co.uk www.cphart.co.uk

INSTALLATION INFORMATION / REQUIREMENTS:

- Drill holes for Spout and Valves.
- Locate Spout to mounting surface.
- Locate Valves to mounting surface with head-works collar, ensuring that the grub screw is at the rear of the installation. Valve marked 'H' on LHS and Valve marked 'C' on RHS.

NB: 1: The hot water valve opens clockwise and the cold water valve opens anti-clockwise. 2: The brass nut and conical rubber washer are for use with hoses with plain ends. If these are not required, please discard.

- Fit head-works to valve so that base of the head-works is flush with the top of the collar. Do not over tighten the grub screw in the collar as this is an anti-theft function and not for location purposes.
- Connect spout hoses to the side connectors on the valves. Avoid twisting or bending the hoses at acute angles. Coil into a loop as necessary.
- Connect hot water supply to bottom of LH valve and cold water to bottom of RH valve.
- Install Pop-up waste. The long pop-up waste rod enters the Spout collar at approximately 75 degrees to the horizontal. When the pop-up plug is open, the knob on the long rod should be just touching the collar.
- After installation and ensuring valves are closed before turning on the hot and cold water supplies, test the system by removing the Aerator and flushing through. Replace the Aerator.
- For ease of maintenance, it is recommended that service valves are fitted to both the hot and cold feeds.
- When making good, ensure all connections can be readily accessed for servicing.

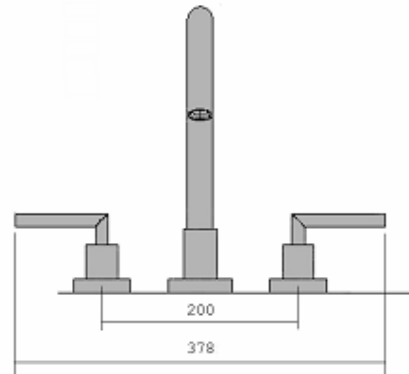


C.P. Hart cannot guarantee the accuracy of this information.

Dimensions are nominal – for guidance only and are not to be used for pre-installation.

For further information call Central Sales on 0845 600 1950

For projects & developments call the Contracts Team on 0845 600 1980

www.cphartboutique.co.uk www.cphart.co.uk

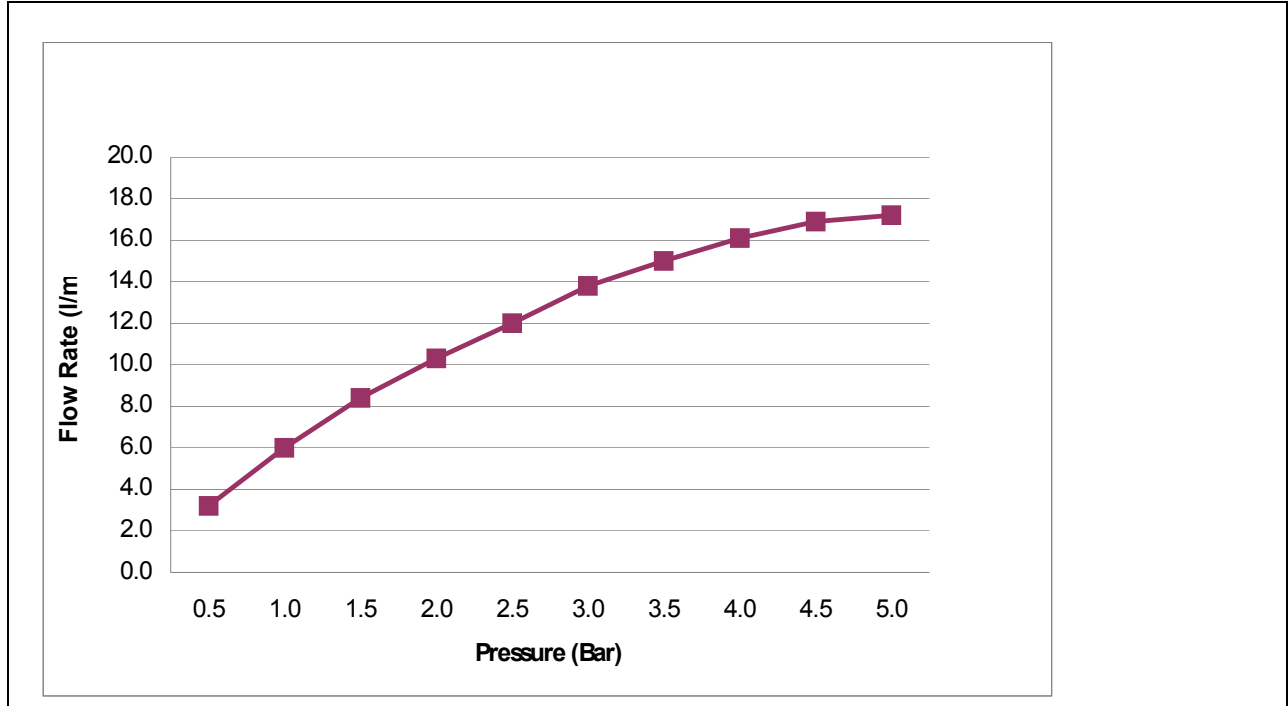

C.P. Hart cannot guarantee the accuracy of this information.

Dimensions are nominal – for guidance only and are not to be used for pre-installation.

For further information call Central Sales on 0845 600 1950

For projects & developments call the Contracts Team on 0845 600 1980

www.cphartboutique.co.uk www.cphart.co.uk